opk®

A   B   C   D   E   F

G   H   I   J   K   L   N

Ceiling

Decorative profile for outer door(optional)

Min 150mm
80
55
35
H
DH=H+80
46
23
25
60

W

Top panel of the wardrobe should be parallel and aligned with bottom panel.

A+B+7
B
A
5
OL
DW=(W+OL)/2

W

Top panel of the wardrobe should be parallel and aligned with bottom panel.

A+18+7
18
24
25
18.5
10
24
18.5
43
10
A
5
DW'=DW-5
OL=10
DW=(W+OL)/2

18mm Door panel

18mm

40mm Door panel

40mm

Up&down adjustment

Door thickness adjustment

Door thickness range
18~40mm
2
40 36 28 18

Anti-jump adjustment

Installation dimensions
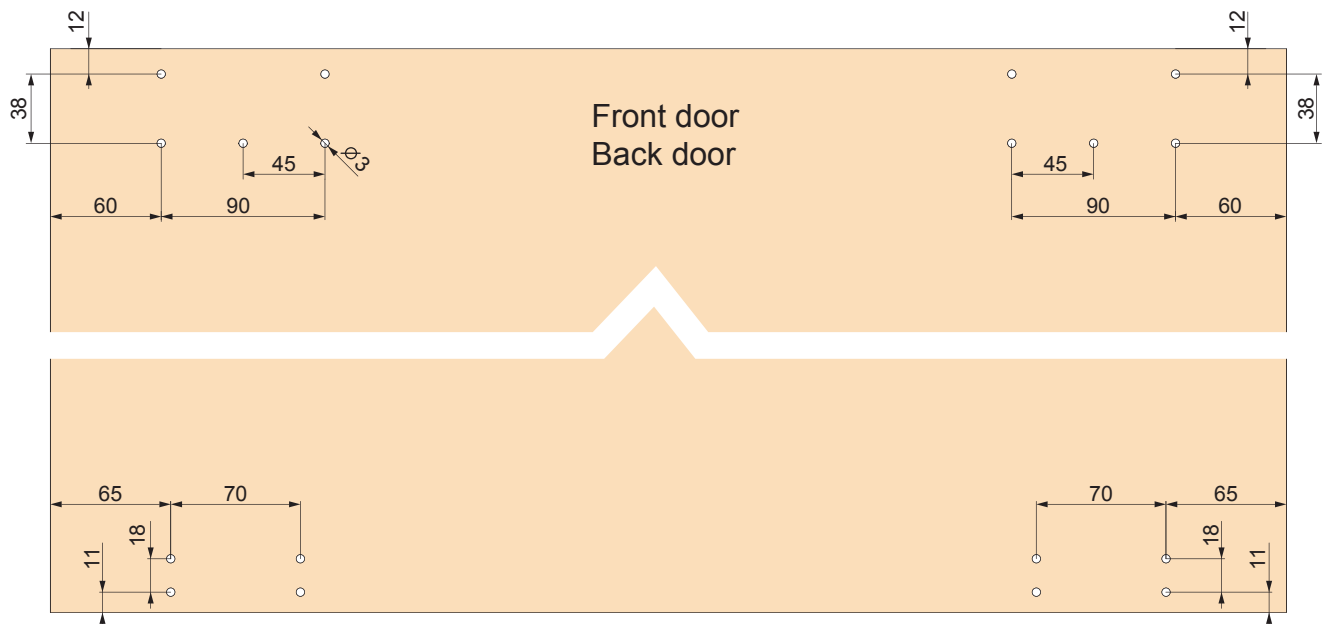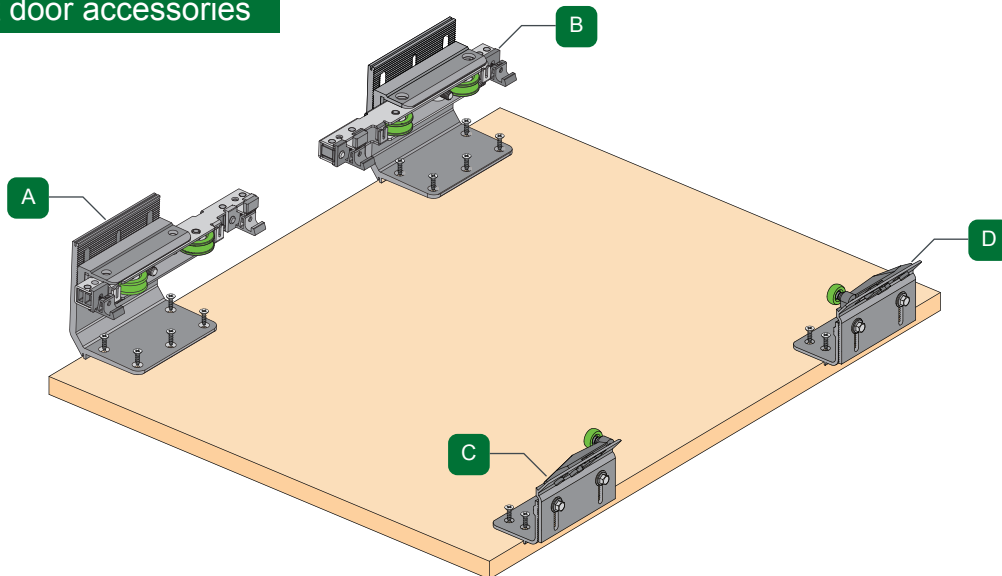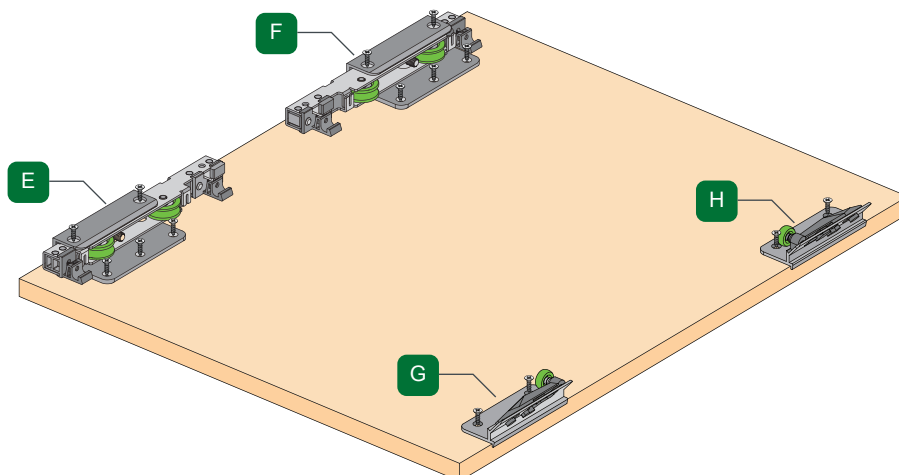
12
38
60 90 45 ⌀3

Front door
Back door

12
38
45 90 60

65 70
11 18

70 65
18 11

Install front door accessories

A B C D

Install back door accessories

E F G H

SLIDING DOORS SYSTEM EXPERTS

opk®

Install front door accessories

A B J D C J

Install back door accessories

F K E H G J

Install top track

Or

1 L

2

17
48

35

Install bottom track

1

N

2

23

SLIDING DOORS SYSTEM EXPERTS
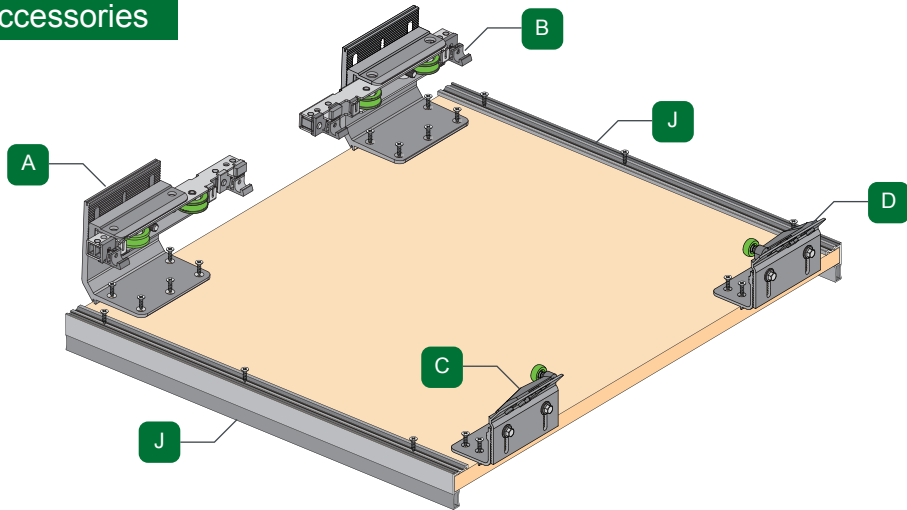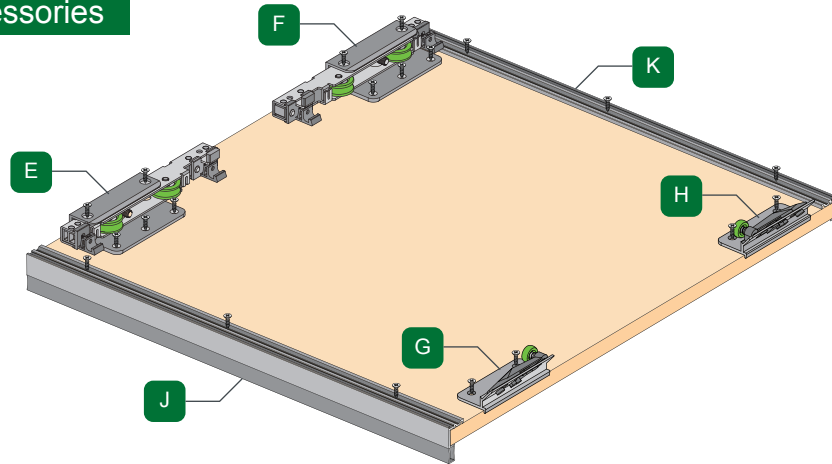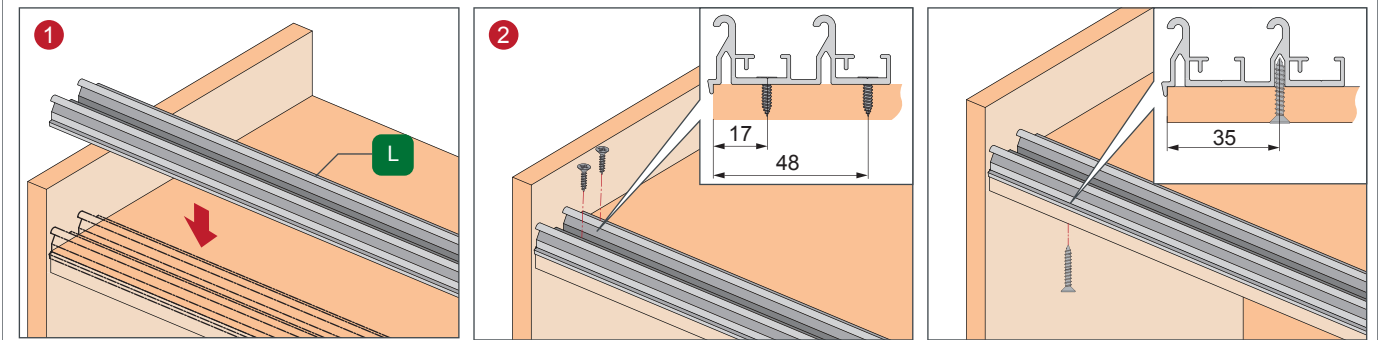
opk®
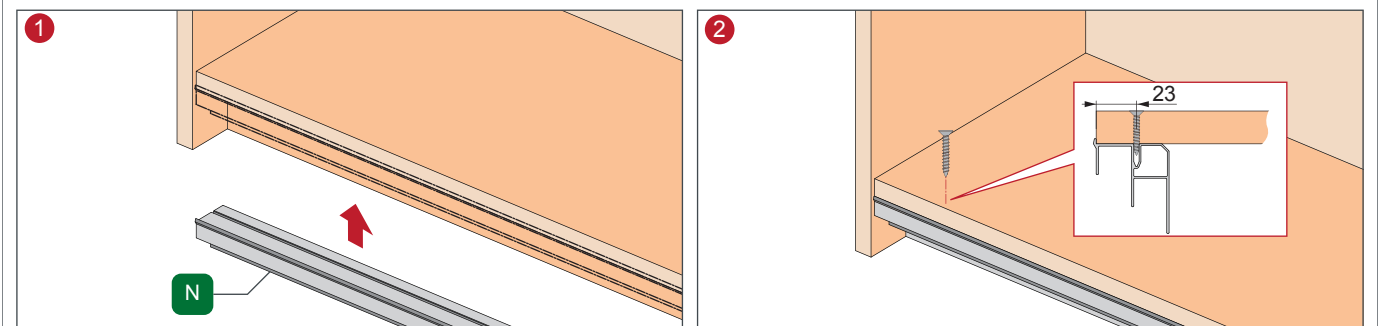
Install back door

1
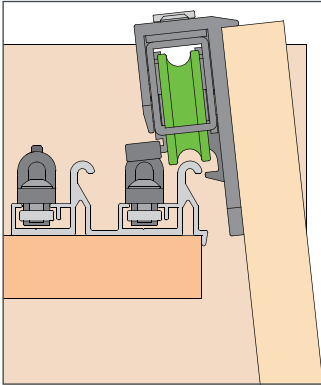
2
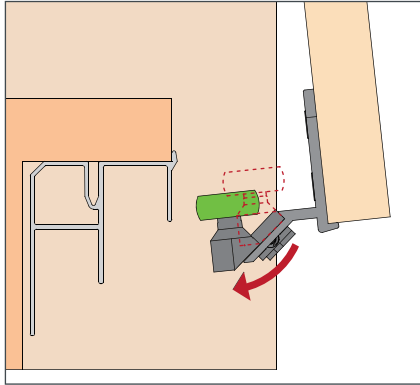
3

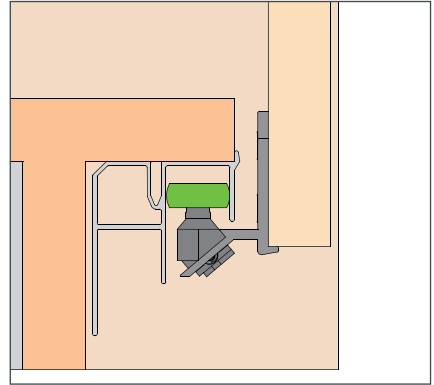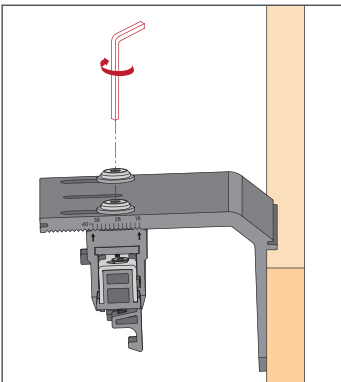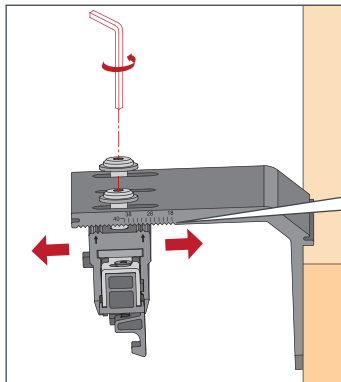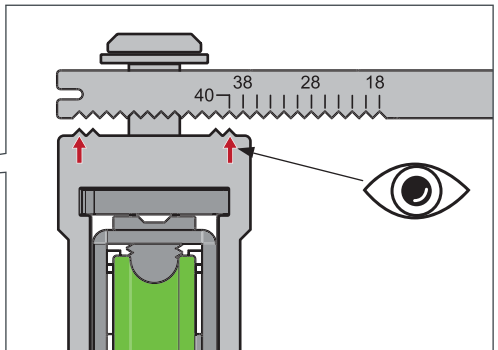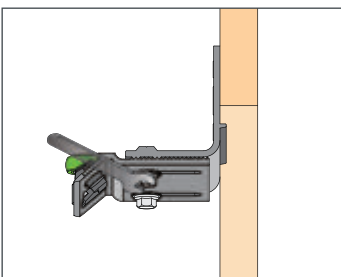## Install front door

1 Loosing top running part

2 Adjustment according to door thickness

Door thickness:40mm

40 38   28   18

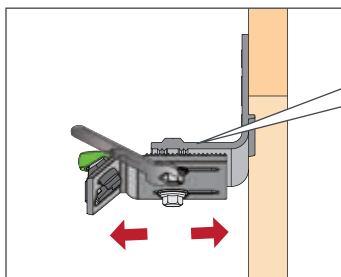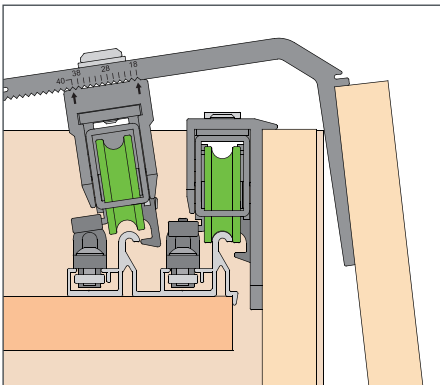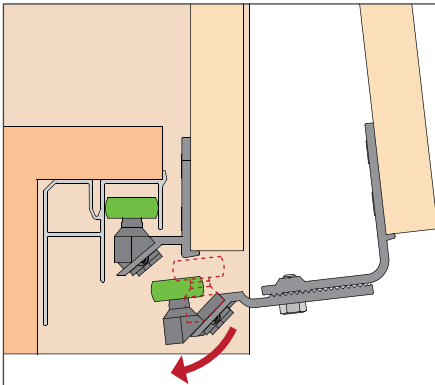**3** Loosing bottom guiding part

4 Adjustment according to door thickness
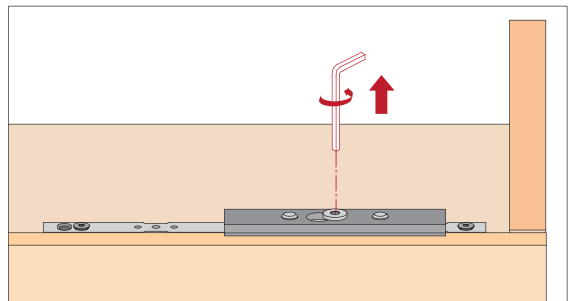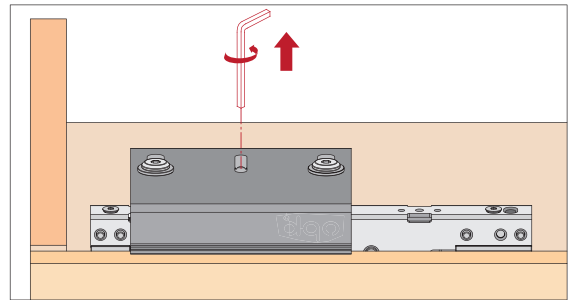

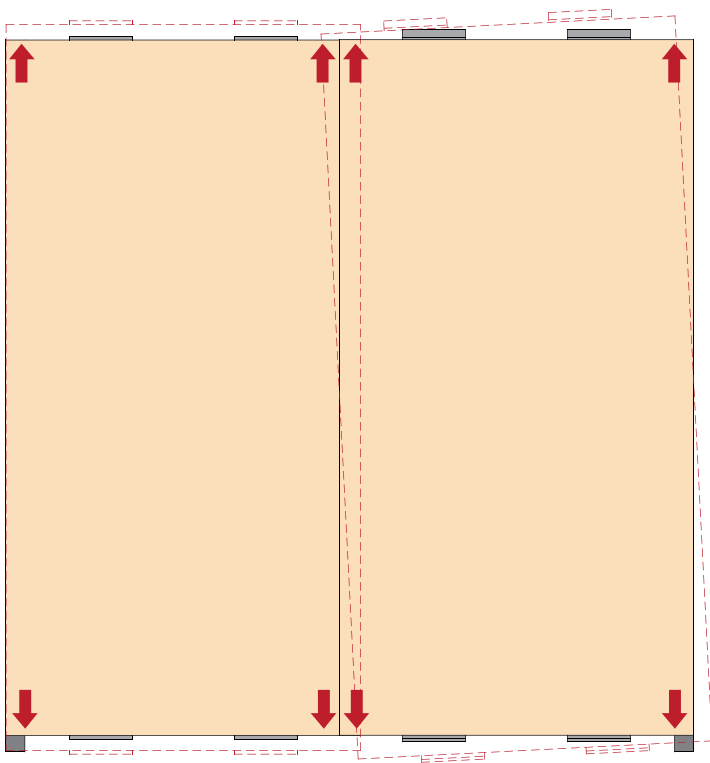18   28   38 40

5

40 28 18
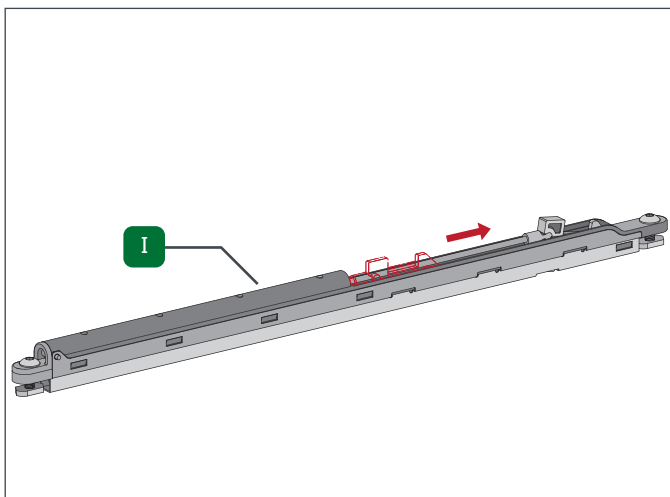
6

7

SLIDING DOORS SYSTEM EXPERTS

opk
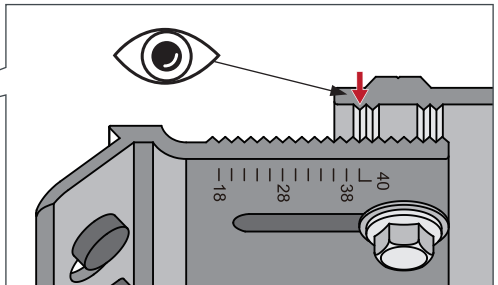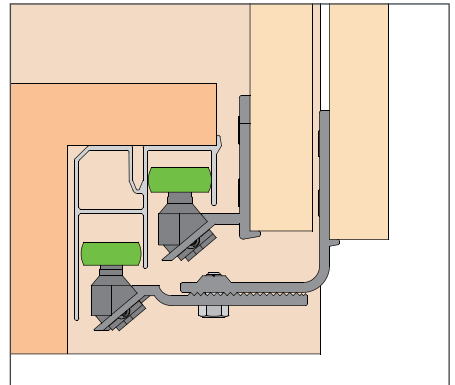
Door height adjustment

Install damper

1 Open the damper hook

I

2

Damper location

SLIDING DOORS SYSTEM EXPERTS

opk
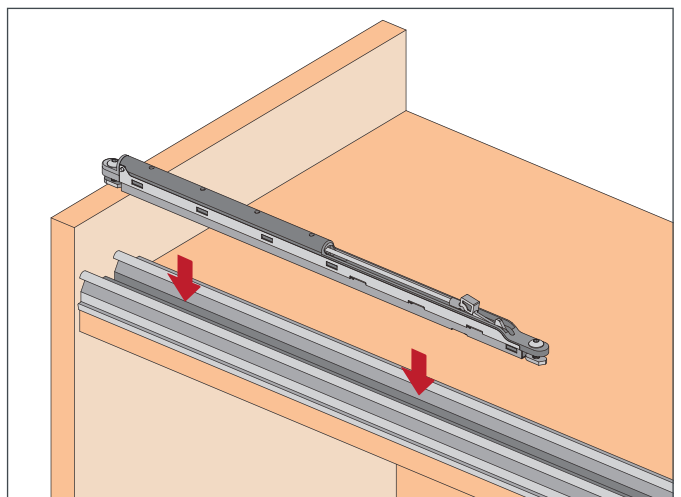
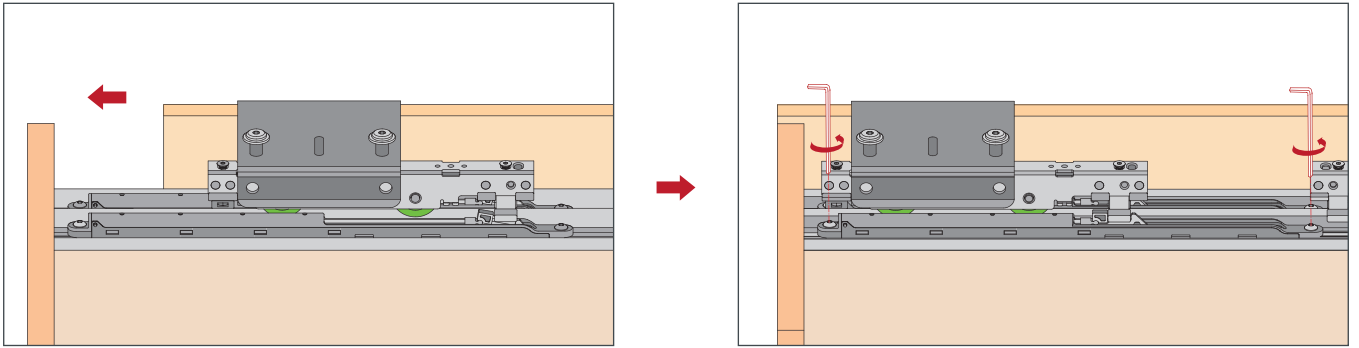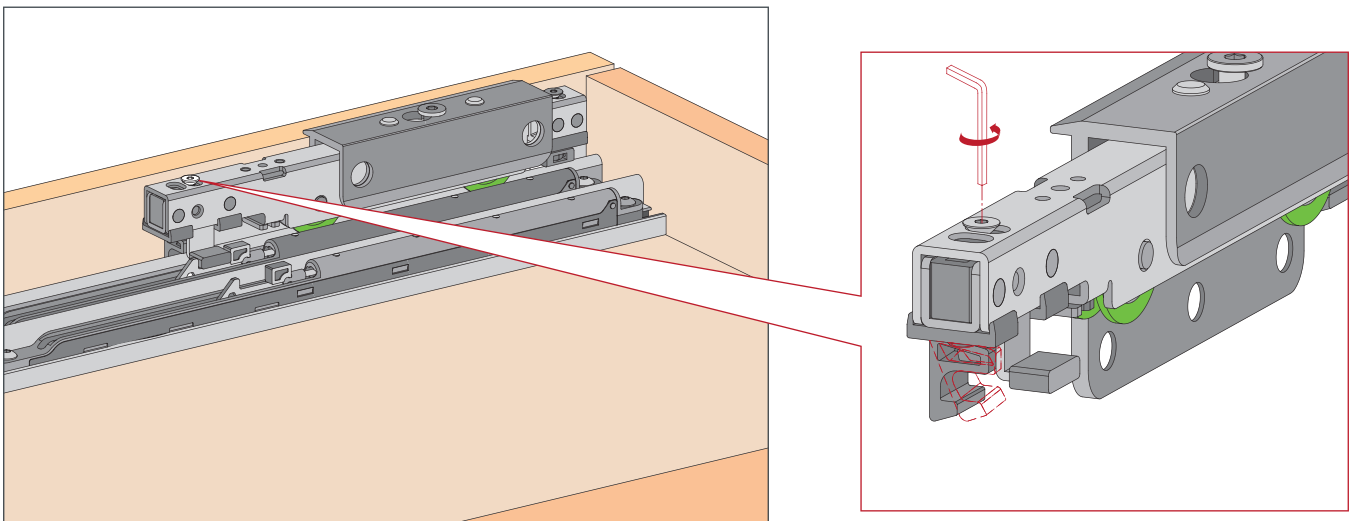## Position the damper

Anti-jump hook adjustment

Install decorative cover for outer door (optional)

SLIDING DOORS SYSTEM EXPERTS